

CERAMIC WINDSHIELD COATING WIPES APPLICATION INSTRUCTIONS

IMPORTANT! PLEASE READ CAREFULLY BEFORE USE.

Do **NOT** apply in direct sunlight or in temperatures below **5°C / 41°F** or above **30°C / 86°F**. If the coating touches paint or trim, simply wipe off immediately with a dry cloth.

You'll need:

- (2) Detour Ceramic Glass Coating Wipes
- Glass cleaner
- Paper towels
- Isopropyl Alcohol
- Disposable gloves
- Microfibre towel


PREPARATION

- ⚠ **Note:** Ensure the glass is **completely** clean and dry before proceeding to Step 3. Water spots, streaks, remaining moisture, or other contaminants can negatively affect performance.
- 1) Lift both windshield wipers if applicable. Use glass cleaner and paper towels to **thoroughly** clean and dry the entire glass surface. **TIP:** For optimal visibility, consider cleaning the inside of the windshield too.
 - 2) Use isopropyl alcohol to clean the entire glass surface again.

APPLY

- ⚠ Put on **Gloves**.

- 3) Using one **Ceramic Glass Coating Wipe** per side of the windshield, apply the coating in a grid pattern (up/down, then side-to-side) to ensure full coverage.

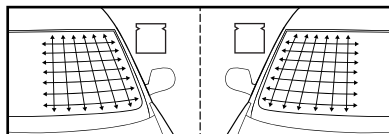

- 4) **Wait approx 7-10 minutes**, then use a clean microfibre towel to firmly buff off the coating in a circular motion until the glass is completely clear. Flip towel to a clean side as needed. Variables such as temperature and humidity may affect waiting time, adjust accordingly.
- 5) Let the coating cure for at least **1 hour** before exposure to moisture, and at least **24 hours** before washing the vehicle.

REVÊTEMENT CÉRAMIQUE POUR PARE-BRISE INSTRUCTIONS POUR L'APPLICATION

IMPORTANT ! VEUILLEZ LIRE ATTENTIVEMENT AVANT L'UTILISATION.

Ne **PAS** appliquer en plein soleil ou à des températures inférieures à **5 °C / 41 °F** ou supérieures à **30 °C / 86 °F**. Si le revêtement entre en contact avec la peinture ou les garnitures, il suffit de l'essuyer immédiatement à l'aide d'un chiffon sec.

Vous aurez besoin :

- (2) Detour Lingettes pour revêtement de verre céramique
- Nettoyants à vitres
- Essuie-tout
- Alcool Isopropylique
- Gants jetables
- Serviette en microfibres

PRÉPARATION


- ⚠ **Remarque :** Assurez-vous que la surface vitrée est **parfaitement** propre et sèche avant de passer à l'étape 3. Les taches d'eau, les traînées, l'humidité résiduelle ou d'autres contaminants peuvent affecter négativement les performances.

- 1) Relevez les deux essuie-glaces, puis utilisez un nettoyant pour vitres et des essuie-tout pour nettoyer et sécher **soigneusement** toute la surface du pare-brise. **CONSEIL :** Pour une visibilité optimale, nettoyez également l'intérieur du pare-brise.
- 2) Utilisez de l'alcool isopropylique pour nettoyer à nouveau toute la surface vitrée.

APPLIQUER

- ⚠ Enfilez des **gants**.

- 3) Utilisez une **lingette de revêtement céramique** pour chaque côté du pare-brise. Appliquez le revêtement en suivant un motif en grille (haut/bas, puis de gauche à droite) afin d'assurer une couverture complète.



- 4) **Attendez environ 7-10 minutes**, puis utilisez une serviette en microfibre propre pour polir fermement le revêtement en effectuant un mouvement circulaire jusqu'à ce que le verre soit complètement clair. Retournez la serviette sur un côté propre au besoin. Des facteurs comme la température et l'humidité peuvent influencer le temps d'attente; ajustez en conséquence.
- 5) Laissez durcir le revêtement pendant au moins **1 heure** avant toute exposition à l'humidité et au moins **24 heures** avant de laver le véhicule.